

OSCILLATING SPINDLE SANDER

SAFETY

Avoid placing hands on sanding drum.

Hold small pieces with a jig or a clamp.

Wear proper apparel. Do not wear gloves.

Wear eye protection.

Be sure guards are in place.

Never leave machine running while unattended.

Always disconnect power from source when changing belt or performing maintenance.

OPERATIONS

To change the sanding drum, remove knob on top of sanding spindle, then remove sanding drum.

Slide sanding sleeve off drum and replace. Put drum on spindle, select appropriate size clearance ring, and tighten knob.

The belt sander is installed by slipping the large drum over the spindle and locking it with the knob. The belt can be changed by releasing the belt tension lever, removing and replacing the belt, and tightening the belt tension lever. Use the stop with the belt sander.

Table is adjustable to sand up to a 45-degree angle.

All drums, clearance rings, and belt sanders have slots in the frame of the sander to hold the parts. Please place in proper slots when not in use.

ASR 10 21 07